



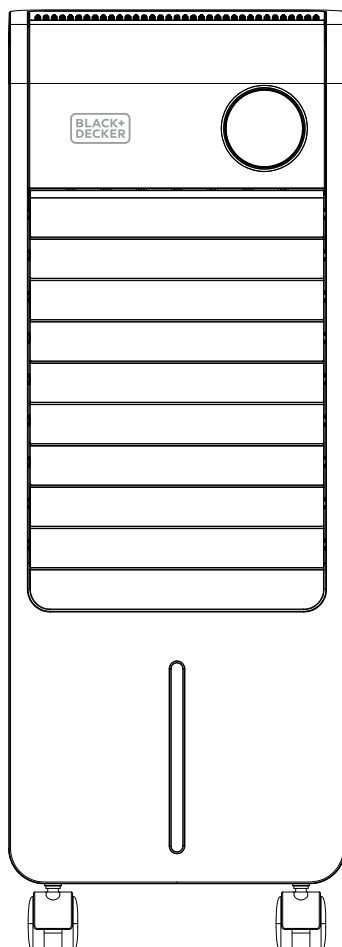

www.blackanddecker.co.uk

BXAC65014GB

This product is only suitable for well insulated spaces or occasional use.

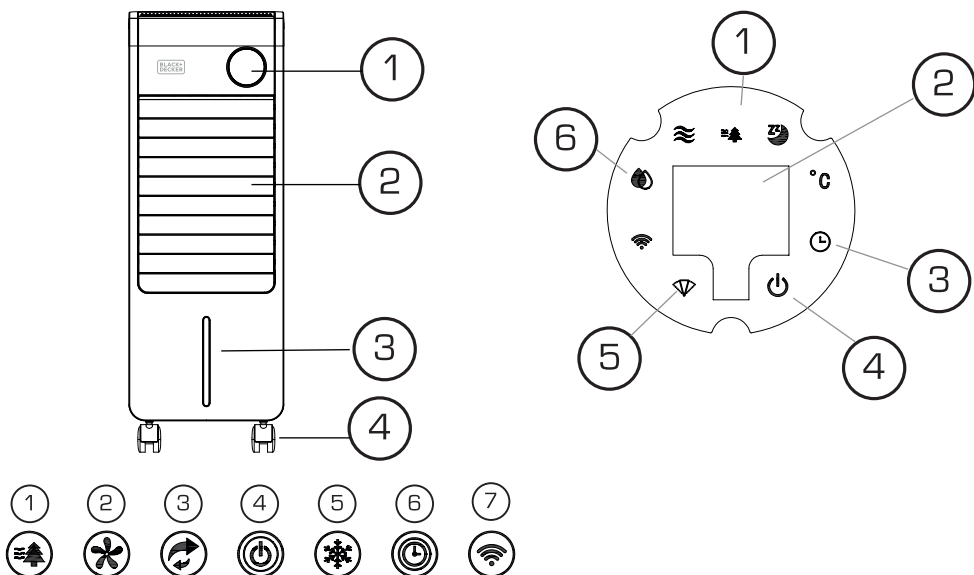

What's in the box

BXAC65014GB 7L Smart
Air Cooler
Remote Control
2 x Ice Packs
4 x Castor Wheels
Instruction Manual

Control Panel

1. Mode selection key
2. Speed selection key
3. Swing key
4. Power On/Off key
5. Cooling mode key
6. Timer key
7. WiFi Key

Features


1. LED display
2. Front grille
3. Water viewing window
4. Castor wheels

LED Display

1. Speed selection indicators
2. LED display
3. Timer indicator
4. Power On/Off indicator
5. Swing indicator
6. Cooling mode indicator

Remote Control

1. Power On/Off button
2. Speed selection button
3. Timer button
4. Swing button
5. LED display On/Off button
6. Mode selection button
7. Cooling mode button

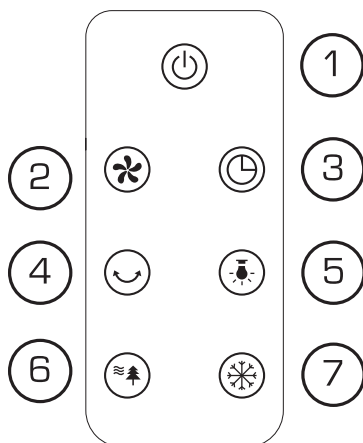

Intended use

Your BLACK+DECKER BXAC65014GB 7L Smart Air Cooler has been designed and is intended for indoor household use only.

Thank you for choosing BLACK+DECKER. We hope that you will enjoy using this product for many years.

Safety instructions

⚠WARNING: Read all safety warnings and all instructions. Failure to follow the warnings and instructions listed below may result in electric shock, fire and/or serious injury.

- ◆ Read this manual carefully before using the appliance.
- ◆ The intended use is described in this manual.
- ◆ The use of any accessory or attachment or the performance of any operation with this appliance other than those recommended in this instruction manual may present a risk of personal injury.
- ◆ Retain this manual for future reference.

⚠WARNING: When using mains powered appliances, basic safety precautions, including the following, should always be followed to reduce the risk of fire, electric shock, personal injury and material damage.

Using Your Appliance

Please read the operating instructions carefully before using your appliance for the first time.

- ◆ Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- ◆ Do not let the cable hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- ◆ The use of accessory attachments is not recommended by the appliance manufacturer, apart from those supplied with this product.
- ◆ Do not pull the plug out by the cable as this may damage the plug and/or the cable.
- ◆ Do not use this product for anything other than its intended use.
- ◆ Do not carry the appliance by the power cable.
- ◆ Do not use the appliance outdoors.
- ◆ Do not operate with wet hands.
- ◆ Use of an extension cable with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of the extension cable, appliance or plug point. Do not place the extension cable in a position where it can be pulled on by children or animals or tripped over.
- ◆ The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.

Safety of others

- ◆ Close supervision is necessary when any appliance is used near children.
- ◆ Children should not play with the appliance.
- ◆ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- ◆ Children should be supervised to ensure that they do not play with the appliance.
- ◆ Children of less than 3 years should be kept away unless continuously supervised.
- ◆ Children aged from 3 years and less than 8 years should only switch the appliance on or off provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years should not plug in, regulate and clean the appliance or perform user maintenance.

- ◆ **⚠CAUTION:** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- ◆ Take care when any appliance is used near pets.
- ◆ Do not allow the cord to become twisted.

After use

- ◆ While cleaning, do not use a wet cloth or use water on any part of the unit, as this may cause a short circuit or electrical shock.
- ◆ Keep this unit clean. Do not allow objects to enter the ventilation opening as this may cause electric shock, or damage to the unit.
- ◆ Check all inlets and outlets regularly for accumulated dust.
- ◆ Disconnect the unit from the mains outlet when it is not in use, or before relocating or cleaning it.
- ◆ Switch off and remove the plug from the socket before leaving the appliance unattended and before changing, cleaning or inspecting any parts of the appliance.
- ◆ When not in use, the appliance should be stored in a dry place. Children should not have access to stored appliances.

Inspections and repairs

- ◆ Do not attempt to dismantle, repair or remould any part of the unit. This should only be done by a qualified BLACK+DECKER service facility. Even the change of power cable should be done by a qualified person.
- ◆ In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from a qualified BLACK+DECKER service facility.
- ◆ In case of technical problems, switch off the product and do not attempt to repair it yourself. Return the appliance to an authorised BLACK+DECKER service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentioned precautions and instructions, could affect the safe operation of this product. Further information about authorised BLACK+DECKER service facilities can be found on www.2helpu.com

Additional safety instructions for Air Coolers and Fans

- ◆ Always operate the appliance on a smooth, even, stable surface. DO NOT place the unit on a hot surface.
- ◆ Ensure that the unit is switched off after use. DO NOT immerse cables, plugs or any part of the

appliance in water or any other liquid.

- ◆ Operate the unit only at the voltage specified.
- ◆ DO NOT use the unit near open windows, as contact with rain and other natural elements could cause an electrical hazard.
- ◆ DO NOT put heavy objects on the appliance.
- ◆ DO NOT tip the unit on its side.
- ◆ Never insert any other object into the unit body to avoid any hazard or unit failure. DO NOT put the unit close to heat-generating devices or near flammable and dangerous materials.
- ◆ If the supply cable is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard
- ◆ The appliance must be positioned so that the plug is accessible. For optimal airflow circulation, leave a distance of at least 1 metre around the appliance on every side.
- ◆ Always direct the airflow in order to optimise cooling. Avoid corners, small objects and other surfaces or objects which may impede the airflow.
- ◆ Be aware that high humidity levels may encourage the growth of biological organisms in the environment.

- ◆ DO NOT permit the area around the appliance to become damp or wet. If dampness occurs, turn the output of the appliance down. If the appliance output volume cannot be turned down, use the appliance intermittently. DO NOT allow absorbent materials, such as carpeting, curtains, drapes, or tablecloths, to become damp.
- ◆ Unplug the appliance during filling and cleaning.
- ◆ Never leave water in the water tank when the appliance is not in use.
- ◆ Empty and clean the appliance before storage. Clean the appliance before next use.

Warning! Do not place the unit on or near a hot gas electric burner.

Information regarding substances of very high concern (SVHC) according to the Regulation 1907/2006/EC (REACH)

This product contains Lead, (substance SVHC), CAS Number: 7439-92-1.

Electrical safety

WARNING! Before use, check that the mains voltage corresponds to the voltage on the rating plate.

Appliance plugs must match the outlet. Never modify the plug in any way.

Do not use any adapter plugs with this appliance. Unmodified plugs and matching outlets will reduce the risk of electric shock.

To avoid the risk of electric shock, do not immerse the cord, plug or appliance in water or other liquid.

WARNING! Before assembling, switch the appliance off and remove the plug from the socket.

Mains plug replacement

WARNING! The below section on mains plug replacement is for authorized service centre persons.

If a new mains plug needs to be fitted:

Safely dispose of the old plug.

About The Controls

- 4 operational modes: Normal, Natural, Sleep and Air Cooling
- 3 fan speeds
- Swing function
- 12-hour timer
- Smart functionality
- Control panel light On/Off function

Before First Use

Note! Read all instructions and safety information carefully before first use. Please retain this information for future reference.

Remove your appliance from the packaging. Check that there is no damage to the cord or any visible damage to the body or accessories. Dispose of the packaging in a responsible manner.

Insert the batteries into the remote control, as detailed below.

Using Your Appliance

Installing the Batteries

To begin using your air cooler, start by installing the battery into the remote control.

To install the battery, first detach the battery cover from the remote. To do this, place a thumb or small object on the grooved area on the underside of the battery cover and push it gently to the side, while simultaneously pulling the compartment away from the body of the remote.

Insert 1 x CR2025 battery (not included) into the battery compartment, taking care to ensure the positive polarity is facing upwards.

Once the battery is in place, slide the battery cover back into the remote and screw it back into place until it is secured. Ensure the battery cover is firmly secured into place before attempting to use the unit.



Installing the Wheels


To prepare the air cooler for use, start by installing the wheels.

To install the wheels, first place the unit on a stable surface and turn it upside down.

Once the unit is upside down, locate the four holes on each corner of the base. Insert each of the four castors into one of these holes and push them in to secure them into place before attempting to use the unit.

Once all four castors have been securely fitted into place, turn the unit right-side up.

The unit is now ready for normal use.

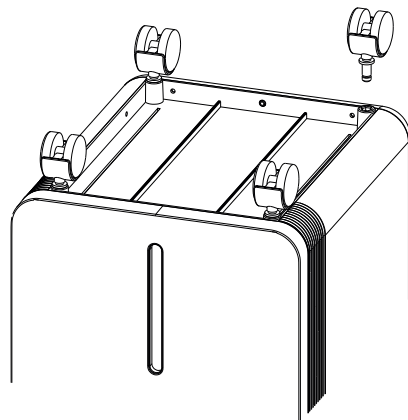

Filling the Water Tank

To use the unit, start by filling the water tank. To do this, move the locking tab horizontally to the open position and pull the water tank out from its slot at the lower back of the unit, as far as it will go.

Once the tank has been pulled out, unclip the water pump from it. To do this, pull the plastic tab connecting the two parts slightly aside, then pull the water pump up and away from the base of the water tank.


Once the water pump is unclipped, the water tank can be fully removed from the unit for filling.

Once the tank has been pulled out, fill it with water from the tap or a suitable recipient, taking care not to fill it past the Max fill line.

Once the water tank is filled, slide it back into place and clip the water pump back into place by threading the clip through the corresponding slot on the water tank, then pushing the other side of the pump underneath the plastic securing tab until it slots into place.

When the water pump is reattached to the tank, move the locking tab vertically to the locked position to secure the tank into place.

Note! Take care not to sever the connection between the water tank and the unit, as this will damage it and cause the unit to malfunction.

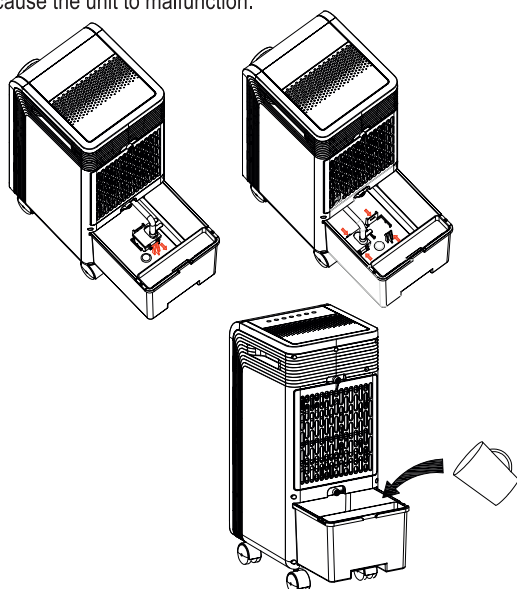

Using the Ice Packs


This unit comes complete with 2 x ice packs, for added cooling functionality.

To make use of the included ice packs, start by filling them with water. To do this, rotate the lid counter-clockwise to loosen it. Fill the pack with water, then replace the lid and turn it clockwise to tighten it.

Note! Be careful not to overfill the bottle, as water expands when frozen. If necessary, leave the lid loosely tightened after filling.

Once one or both ice packs have been filled, put them in the freezer and leave them to chill for a few hours or overnight.

When the ice packs have frozen through, take them out of the freezer and insert them into the previously filled water tank. This will help chill the water in the tank, for more effective cooling.

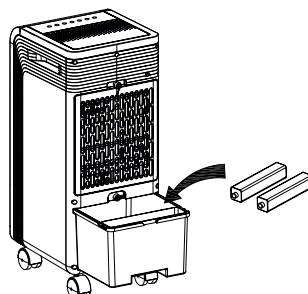

Turning the Appliance On

Once the water tank has been filled, the appliance into a compatible mains socket, ensuring the socket switch is in the On position. There will be a sound prompt, and the  indicator will light up on the LED display to show the unit is plugged in and on Standby mode.

When the unit is plugged in, press the  key on the remote control or the unit's control panel to turn it on. The LED display will illuminate to show the unit has been turned on.

Press this button again while the unit is operating to put it into Standby mode. The control panel will go out with just the  indicator remaining illuminated, to show the unit is on Standby mode.

Speed Selection

Once the unit has been turned on, press the  key on the remote control or the unit's control panel to cycle through and select the desired operational speed, between Low, Medium and High. The text 'F1', 'F2' or 'F3' will show on the unit's LED display, and the unit will automatically adjust to the selected speed.

Repeat this process while a specific speed setting is selected to change to a different speed.

Mode Selection

There is a choice of 3 cooling modes: Normal, Natural and Sleep.

- ◆ In Normal mode, the unit will cool continuously at the desired speed.
- ◆ In Natural mode, the unit will automatically cycle through different speed settings to simulate a natural breeze.
- ◆ In Sleep mode, the air cooler will decrease the fan speed from High to Low at 30 minute intervals until it reaches the Low speed, then remain on Low for the duration of operation.
- ◆ Press the  key on the remote control or the unit's control panel to cycle through and select each of the three modes. The corresponding indicators () will light up on the unit's control panel to show each mode has been selected.

Note! The default operational mode for the unit is Normal.

The Cooling Function

This unit is equipped with an air cooling function, ideal for lowering room temperature or refreshing the air inside a room.

- ◆ Press the  key on the remote control or the unit's control panel to activate the cooling function. The  indicator will light up to show the cooling function has been activated.
- ◆ Press the  key again while the cooling function is in operation to turn this function off.

The  indicator will go out to show the function has been turned off.

Note! Always ensure the water tank is filled before attempting to use the cooling function; otherwise, this function will not operate correctly. Refer to the 'Filling the Water Tank' section for instructions on how to fill the water tank.

The Timer Function

The unit is complete with a built-in digital timer, allowing for preset cooling cycles of up to 12 hours.

- ◆ Press the  key on the remote control or the unit's control panel to activate the timer function. The number '01' will show on the unit's LED display to indicate the timer function has been activated.
- ◆ Once the timer function is activated, repeatedly press the  key on the unit's control panel to increase the length of the preset time by increments of 1 hour, from 1 to 12 hours. The corresponding number will show on the unit's LED screen to indicate each timer has been selected.

Note! The timer function operates in ascending order only. To decrease the length of the cooling cycle, repeatedly press the  key on the remote control or the unit's control panel until a full cycle has been completed and no text is showing on the unit's LED screen; then, repeatedly press this key again until the corresponding length of time has been selected. For example, to go down from a 5 hour cooling cycle to a 2 hour cooling cycle, press the  key until the timer has gone past the '12' setting and the LED screen is once again displaying '00', then press it twice more until the numbers '02' appear on the unit's LED screen.

Note: This air cooler has a weekly programmable timer but you need to use the BLACK+DECKER home app to activate.

Controlling the Air Flow

This unit allows for manual control of the air flow through the positioning of the outer louvers at the front of the unit.

- ◆ To position the louvers, gently hold them by the lip and push them upwards or downwards as required. Push the louvers upwards to open them, or downwards to close them.

The Swing Function

In addition to manual air flow control, this unit is also equipped with a swing function, for optimal air flow distribution.

- ◆ Press the  key on the unit's control panel or the  key on the remote control to activate the swing function. The indicator will light up on the unit's control panel to show this functionality has been selected, and the inner louvers will automatically begin to swing from side to side.
- ◆ Press the  or  keys again while the swing function is activated to turn it off. The indicator on the unit's control panel will go out and the inner louvers will automatically stop oscillating.

Wi-Fi Functionality

Connecting to WiFi/Downloading The App

- ◆ Press and hold the WIFI function key  for 3 seconds to enable WIFI pairing. The WIFI indicator light  will flash. Press and hold the WIFI function key  for 3 seconds again to disable WIFI pairing. The WIFI indicator light  will go out."
- ◆ To start using the 'BLACK+DECKER Home' app, begin by downloading it from the Apple App store or the Google Play store. Scan the QR Codes shown below to download the app directly from either store.
- ◆ Follow the instructions in the app to create an account and connect the dehumidifier to a Wi-Fi network.

Note: Other app and device instructions are also available on the app.



Connecting the app to the unit:

- ◆ Install the "BLACK+DECKER Home" app and create a user account.
- ◆ Plug the appliance in and press and hold the Wi-Fi key on the control panel for about five seconds. This will activate the Wi-Fi function and allow for the unit to be paired to the BLACK+DECKER app.

Note! This process will not engage when using the remote control. Make sure to press the Wi-Fi key on the control panel of the unit itself.

- ◆ As the indicator comes within 5 metres of your router, red flashes mean plugged in, the Wi-Fi indicator flashes.

Wi-Fi Connection:

- ◆ In the BLACK+DECKER app, activate the Wi-Fi connection indicator to connect to the device.
- ◆ Press and hold the Wi-Fi button on the appliance for 5 seconds until the indicator flashes rapidly.
- ◆ The device will then connect automatically.

Wi-Fi Functionality

Connecting to WiFi/Downloading The App

- ◆ To start using the 'BLACK+DECKER Home' app, begin by downloading it from the Apple App store or the Google Play store. Scan the QR Codes shown below to download the app directly from either store.
- ◆ Follow the instructions in the app to create an account and connect the dehumidifier to a WiFi network.

Note: Other app and device instructions are also available on the app.

Connecting the app to the unit:

- ◆ Install the "BLACK+DECKER Home" app and create a user account.
- ◆ Plug the appliance in and press and hold the Wi-Fi key on the control panel for about five seconds. This will activate the Wi-Fi function and allow for the unit to be paired to the BLACK+DECKER app.

Note! This process will not engage when using the remote control. Make sure to press the Wi-Fi key on the control panel of the unit itself.

- ◆ As the indicator comes within 5 metres of your router, red flashes mean plugged in, the Wi-Fi indicator flashes.

Wi-Fi Connection:


- ◆ In the BLACK+DECKER app, activate the Wi-Fi connection indicator to connect to the device.
- ◆ Press and hold the Wi-Fi button on the appliance for 5 seconds until the indicator flashes rapidly.
- ◆ The device will then connect automatically.

Pairing the Unit to Alexa and Google


Connecting to Voice Assistants (Google)

Follow the steps mentioned below to connect to the Black+Decker Home App.

1. Once the product is connected, tap the 'Profile' key, then select the smart device platform you wish to pair with e.g. Google Assistant.

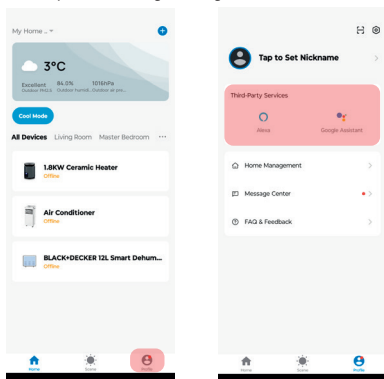


2. Next Steps for Google Assistant (Please ensure you are signed into your Google Home Account before proceeding):
3. A new screen will be displayed, showing 'Link to Google Assistant'. On this screen, tap the 'Get' button to pair the product with your smart device using the 'Link with Verification Code' function.

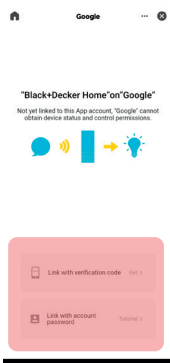


4. Copy the verification code.


5. Open the Google Home app.

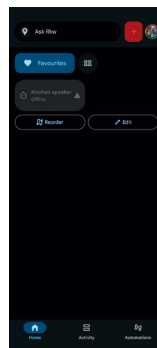


6. Tap 'Devices' and then 'Add'.

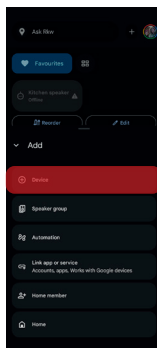


7. On the next screen, tap the 'Works with Google Home' button.

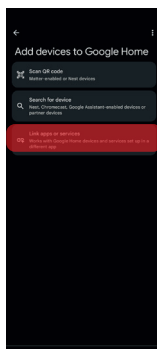

8. Finally, search for the Black+Decker Home app, and click on it. You will be directed to a Verification Code website for pairing products set up on the Black+Decker Home App with Google Assistant. Enter in the verification code from step 4.

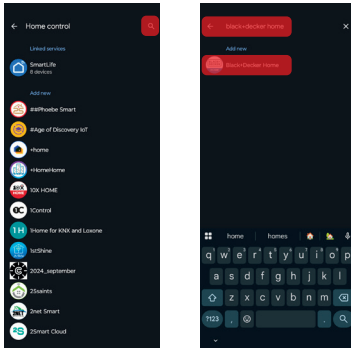

9. Next, tap 'Authorize' to link the Black+Decker Home app to your device. A pop-up message will indicate when the Black+Decker Home app has been linked.

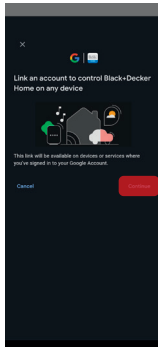


10. A new screen will appear prompting you to 'Choose device'. This will show all current Black+Decker smart devices already connected via the Black+Decker Home App. Select which device you would like to connect and then tap 'Next'.
11. On the 'Choose a Home' screen, select the home you would like to link the device to, then tap 'Next'. The following screen will ask you to select 'Where is this device'. Select the relevant part of the home, then tap 'Next'. The device will be added.

Note! If there are multiple Black+Decker smart devices connected to the Black+Decker App the next screen will ask you to 'Choose Device'. If this is not required, press the cross symbol.


Connecting to Voice Assistants (Amazon)

(Please ensure you are signed into your Amazon Alexa app before proceeding).

Once the product is connected, tap the 'Profile' key, then select the smart device platform you wish to pair with e.g. Alexa.

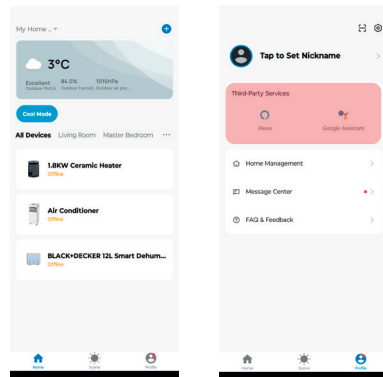


1. On the screen showing 'Amazon Alexa - Link your app account to your amazon account', tap 'Sign In With Amazon'.

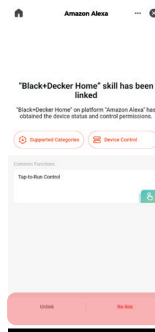

2. On the next screen, 'Link Black+Decker Home with Alexa', tap the 'link' button. If the screen shows the app is already linked, click 'Re-Login' and connect to Alexa again.

Connecting to Voice Assistants (Amazon)

3. Amazon Alexa will now pair the Black+Decker Home app and all its connected devices with Amazon Alexa.

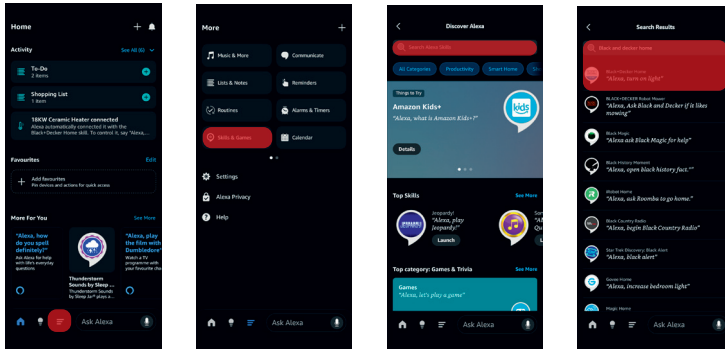


4. To add further devices, go back to the Black+Decker Home app and connect the device. Once this is done, return to the Amazon Alexa app, go to the 'Smart Home Skills' menu and ensure the Black+Decker Home skill is enabled. If the skill is disabled, press the 'Enable' button to activate it.


Using The Device With The App

Once the device has been successfully connected to the app:


- Tap the On/Off key to turn the unit on. Tap this key again while the unit is on to put it into Standby mode.
- Tap the Sleep key to automatically select and set the Sleep mode. Tap this key again when Sleep mode is activated to deactivate it and return to normal operation.
- Tap the + and – keys within the Set Temp menu to increase or decrease the temperature by increments of 1 degree.

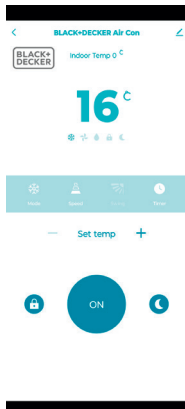


- Tap the Mode key to bring up the corresponding menu. Once the menu is displaying, tap the desired operational mode to select and set it. Repeat this process to select and set a different operational mode.

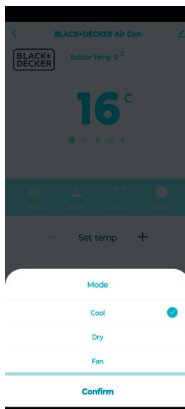

- Tap the Speed Selection key to bring up the corresponding menu. Once the menu is displaying, tap the desired speed level to select and set it. Repeat this process to select and set a different speed level.

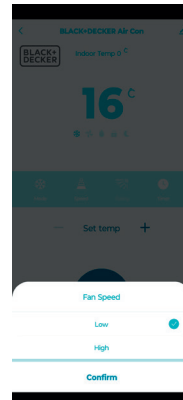

- Tap the Timer key to bring up the corresponding menu. Once the menu is displaying, tap the desired timer length to select and set it. The unit will automatically work to the set timer. Repeat this process to select and set a different timer length.

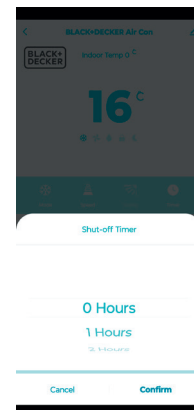

Cleaning and maintenance

⚠ WARNING: Before cleaning and maintenance, switch the appliance off and remove the plug from the socket, to prevent electric shock.

- DO NOT immerse any part of the appliance, power cord or plug in liquids.
- Use a soft damp cloth to wipe the surface. Avoid using detergent, spray or chemicals as these may cause damage to the appliance.

⚠ WARNING: DO NOT allow water or steam to enter any part of the appliance, as this could cause it to malfunction.

- Store the appliance in a cool, dry place, ideally in its original packaging.


Cleaning the Filter

◆ To clean the inner filter, begin by removing the filter cover. To do this, move the locking tab horizontally to the open position, then pull the filter cover out of the unit.

◆ Once the filter cover has been detached from the unit, pull the filter out and wipe it clean. Alternatively, use a vacuum cleaner or duster to clean the filter.

◆ Note! The inner honeycomb filter is NOT washable, and should NOT be cleaned in this way. NEVER place the honeycomb filter under running water or get it wet, as this will impact its filtering performance.

◆ Once the filter has been cleaned, replace the filter cover onto the corresponding notch at the back of the unit and move the locking tab to the vertical locking position to secure it into place. Ensure the filter cover is firmly secured into place before attempting to use the unit.

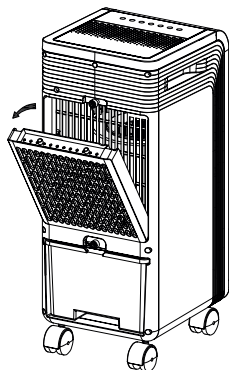

Emptying the Water Tank

◆ To empty the water tank, start by unclipping the water pump from it. To do this, pull the plastic tab connecting the two parts slightly aside, then pull the water pump up and away from the base of the water tank. Once the water pump is unclipped, the water tank can be fully removed from the unit for cleaning.

◆ Once the water tank has been detached from the unit, carefully tilt or drain its contents onto a sink or a suitable container. Ensure the water tank is fully drained and dry before storing the unit.

◆ After emptying, pull out the filter cover as detailed in the section above and wipe the water tank dry with a soft cloth. Take care to ensure the filter cover is fully removed from the unit before attempting to clean the tank, to prevent the honeycomb filter from getting wet. Ensure the water tank is fully dry before replacing the filter cover onto the unit.

Descaling Instructions/Warnings.

◆ Empty and clean the appliance before storage. Clean the appliance before next use.

⚠ WARNING: Micro-organisms that may be present in the water or in the environment where the appliance is used or stored, can grow in the water reservoir and be blown in the air causing very serious health risks when the water is not renewed and the tank is not cleaned properly every 3 days.

◆ Empty the tank and refill every third day. Before refilling, clean it with fresh tap water. Remove any scale, deposits, or film that has formed on the sides of the tank or on interior surfaces, and wipe all surfaces dry.

To store your appliance:

◆ Ensure the water tank and ice packs are fully emptied and that the water tank, ice packs and filters are thoroughly dry before attempting to store the unit.

◆ Store in a cool, dry place, preferably in its original packaging, and out of the reach of children.

WARNING: The following information is for qualified technicians **ONLY** to tend any problems with the BXAC65014GB.

Please do not attempt to fix, repair or alter this product in any way unless you are fully qualified.

For all customer service enquiries please contact us below.

**Email: blackanddecker@rkwltd.com
Customer Service: 0333 220 6089**

Protecting the environment

Separate collection. Products and batteries marked with this symbol must not be disposed of with normal household waste.

Products and batteries contain materials that can be recovered or recycled, reducing demand for raw materials. Please recycle electrical products and batteries according to local provisions. Further information is available at www.2helpU.com.

Technical data

	BXAC65014GB	
Input voltage	V AC	220-240V
Frequency	Hz	50-60Hz
Power input	W	65W
Weight	KG	4.35

Product Guarantee

This product comes with a 2 Year guarantee. If any defect arises due to faulty materials or workmanship, the faulty products must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer. This guarantee is in addition to and in no way prejudices your statutory rights.

The Following Conditions Apply:

The product must be returned to the retailer with proof of purchase or a receipt within 2 years of purchase. For any product related issues after 24 months please contact our customer services team.

The product must be installed and used in accordance with the instructions contained in this instruction guide.

It must be used only for domestic purposes.

It does not cover wear and tear, damage, misuse or consumable parts.

This guarantee is valid in the UK and Republic of Ireland.

Black & Decker® and BLACK+DECKER™ and the Black & Decker® and BLACK+DECKER™ logos are registered trademarks of The Black & Decker® Corporation and are used under license. All rights reserved. Imported and Distributed by R K Wholesale Ltd ST4 2NL

Product Security and Telecommunications Infrastructure (PSTI)

Your Black+Decker 7L Smart Air

Cooler is an interconnected product which uses both wifi and Bluetooth to connect to the BLACK+DECKER Home App. As more devices in the home become connected to the internet, cyber security of the Internet of Things (IoT) is increasingly important to protect end users.

The Black+Decker 7L Smart Air

Cooler will deliver an updated experience on a regular basis including security patches. It is strongly recommended for best performance and security that all maintenance updates should be accepted as soon as possible. The Black+Decker 7L Smart Air Cooler will continue to update until the specified date found within the Software Update website address. Please note updates may well continue after the date but it is likely that they will be less frequent. For further information please visit the below links.

For Security Reporting, Black+Decker actively tries to identify and reduce potential vulnerabilities during the products lifetime and in this effort we value input on actual or potential vulnerabilities reported by yourself.

If you believe you have discovered a vulnerability in a Black+Decker product please follow the Security Report website address below and follow the steps to complete the Security Reporting Form. Further information regarding the process is referenced on our website.

Security Reporting Website Address:

www.rkw ltd.com/#/security-reporting

Software Updates Website Address:

www.rkw ltd.com/#/software-updates

Black & Decker® and BLACK+DECKER™ and the Black & Decker® and BLACK+DECKER™ logos are registered trademarks of The Black & Decker® Corporation and are used under license. All rights reserved. Imported and Distributed by R K Wholesale Ltd ST4 2NL

Technical data

Model identifier(s): BXAC65014GB			
Description	Symbol	Value	Unit
Maximum fan flow rate	F	5,10	m ³ /min
Fan power input	P	61,4	W
Service value	SV	0,083	(m ³ /min)/W
Standby power consumption	PSB	0,19	W
Fan sound power level	LWA	56,3	dB(A)
Maximum air velocity	c	3,9	Meters/sec
Seasonal electricity consumption	Q	19,86	kWh/a
Measurement standard for service value	EN IEC 60879:2019 - Comfort fans and regulators for household and similar purposes - Methods for measuring performance		

ENGLISH

(Original instructions)